

# **GSM/GPRS/GPS TRACKER USER MANUAL**



Thank you for purchasing the tracker. This manual shows how to operate the device smoothly and correctly. Make sure to read this manual carefully before using this product. Please note that specification and information are subject to changes without prior notice in this manual. Any change will be integrated in the latest release.

# Contents

◆ Quick using .....	3
◆ Installation attentions .....	3
1 Summary .....	4
2 Main functions .....	4
3 Specs. ....	4
4 SIM card installation .....	4
5 Power Wires connection .....	5
6 Device Parameter Settings .....	6
6.1 Initialization .....	6
6.2 Set password .....	7
6.3 Authorization.....	7
6.4 Single Locating .....	7
6.6 Auto continuous track .....	8
6.7 Voice Surveillance & Two-way calling.....	8
6.8 Geo-fence .....	9
6.9 Overspeed alarm .....	9
6.10 ACC ON alarm.....	10
6.11 SOS alarm .....	10
6.12 Time Zone Setting.....	10
6.13 Cut oil or circuit .....	10
6.14 Recover oil or circuit .....	10
6.15 Power failure alarm.....	11
6.16 Check device setting parameters.....	11
6.17 GPRS setting.....	11
6.18 Device restart .....	12
6.19 Web platform GPS tracking software .....	12
7 Faults & Solution .....	13

## ◆ Quick using

- 1) Proper insert GSM SIM card, connect to power supply 12V/24V, Must turn on small switch inside SIM card hole.
- 2) Put device outside, around 45-90s three lights will keep lighting on stands for device can work normally.
- 3) Dialing device number, it will hang up and reply tracking message with valid Long and lat to show location.
- 4) Track online system need set two SMS as below:


SMS 1: #IP#123456#116.205.4.114#8169#

SMS2: #apn#123456#APN of operator#APN user name#APN password#

## ◆ Installation attentions

**NOTE: device front side towards the sky.**

Installation: if the windscreen glued by metal thermal insulation layer or heating layer, it will reduce the GPS receive signal and lead to GPS work disorder.

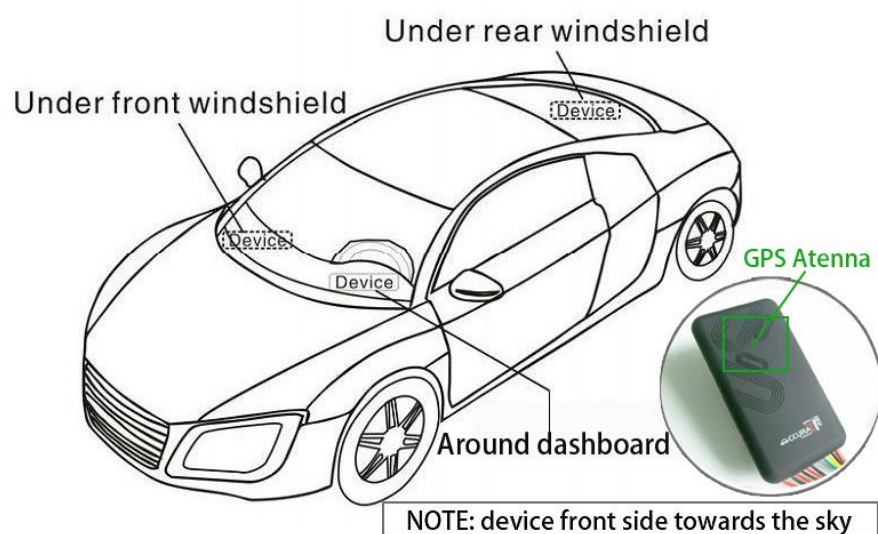

# 1 Summary

Working Based on existing GSM/GPRS network and GPS satellites, this product can locate and monitor any remote targets by SMS or GPRS.

## 2 Main functions

- GSM quad-band frequency;
- Real time tracking by SMS/GPRS;
- Two-way talking function;
- Real time voice monitoring;
- Overspeed alarm/ SOS alarm ;
- ACC anti-theft alarm ;
- Built-in backup battery to realize power failure alarm;
- Cut vehicle oil or circuit.

## 3 Specs.

Content	Specs.
Dim.	97 mm x 51 mm x 15 mm
Weight	80g
Network	GSM/GPRS/GPS
Band	850/900/1800/1900 Mhz
GPS chip	MT3336
GSM module	MTK6260D
GPS sensitivity	-159dBm
GPS accuracy	10m
Time To First Fix	Cold status 45s-90s Warm status 50s Hot status 15s
Work voltage	12V-24V
Storage Temp.	-40°C to +85°C
Operation Temp.	-20°C to +55°C
Humidity	15%--95%

## 4 SIM card installation

### 4.1 Preparation

**Please insert SIM card before turning the device power switch to on;**

The SIM card need open the GPRS function;

Please make sure SIM card with full balance.

## 4.2 Device light description

Color	Represents
red	power
yellow	GSM signal
green	GPS signal


Note: the three lights must be stable lighting on represent device can work normally. All lights will turn off after 5 minutes, if you call the device number, lights will wake up.

## 5 Power Wires connection

### 5.1 4P power wire connection as below:

- 1)4P power red wire connects to vehicle power positive +
- 2)4P power black wire connects to vehicle power negative -
- 3)4P power yellow wire connects to oil pump or circuit control wires
- 4)4P power green wire connects to ACC ignition wire
- 5)other wires connecting to relative accessories in package.

### 5.2 Device wiring diagram

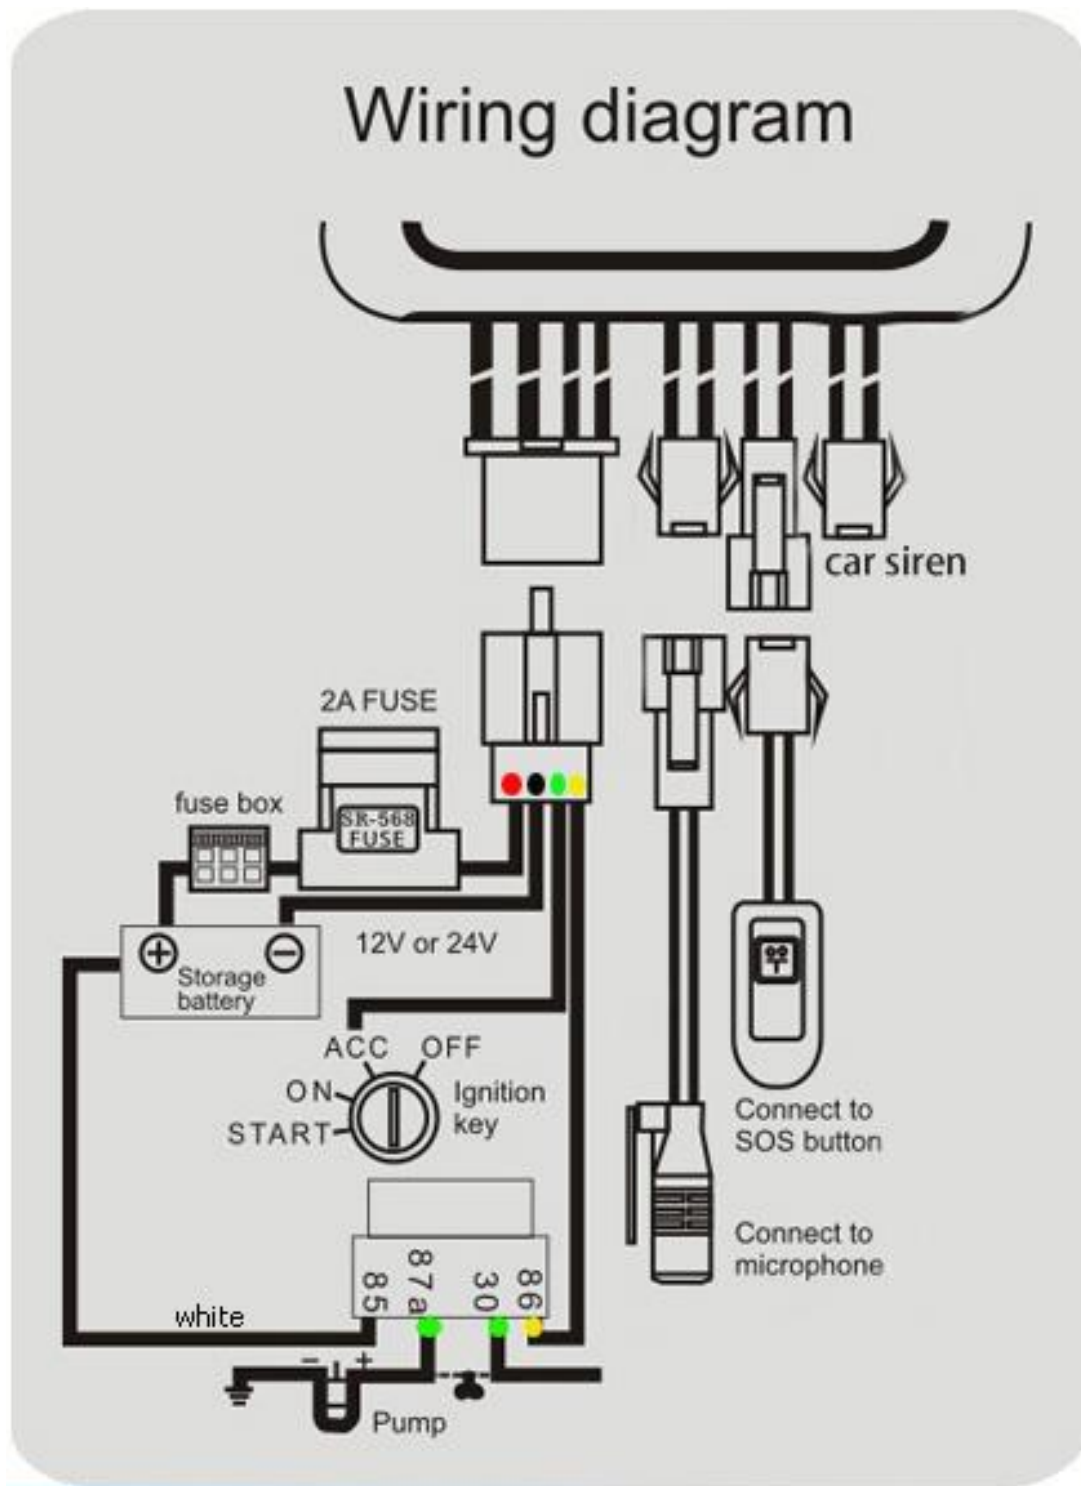

## 6 Device Parameter Settings

### 6.1 Initialization

Send SMS “**#begin#password#**” to the tracker, it will reply “begin ok” and initialize all the settings. (Default password:123456).

For example, send SMS “**#begin#123456#**”, If succeeded, it will

reply“begin ok”.

## **6.2 Set password**

6.2.1 Set Password: Send SMS: “**#password#old password#new password#**” to the unit to change the password.

For Example, send SMS: “#password#123456#666888#” to device, it will reply SMS: “password OK”.

6.2.2 Make sure the new password is in 6 digits arabic numbers, or the device cannot recognize the password.

6.2.3 Resume original password: send SMS: “**#resume#**” to the device, it will reply SMS: “resume password, password is 123456”.

## **6.3 Authorization**

6.3.1 Set authorization: send SMS “**#admin#password#cell phone number#**” to set up authorized number, device will reply “admin ok”.

6.3.3 Delete authorization send SMS “**#noadmin#password#authorized number#**” to delete the authorized number, device will reply “no admin ok”.

## **6.4 Single Locating**

6.4.1 If there is no authorized number, any number dials up the device number, it will report tracking message; if already set authorized number, then it will not respond when an unauthorized number calls it.

6.4.2 **Dialing tracking:** make a call to device number, it will hang up and reply a real-time tracking message as below picture.

6.4.3 **SMS tracking:** send SMS“**#smslink#123456#**”, it will reply a real-time tracking message as below picture.

[http://maps.google.com/  
maps?q=N22.674878,E114.023](http://maps.google.com/maps?q=N22.674878,E114.023)  
439 Speed:0 km/h  
Time:10:46:12 Date:13/12/12  
IMEI:[366866020133735](#)

## 6.6 Auto continuous track

6.6.1 Unlimited time auto track: Send SMS “**#at#time interval#sum#0#**” to the device. For Example, send SMS: “**#at#30#sum#0#**” to device, 30 means 30 seconds.

6.6.2 Cancellation: Send SMS “**#noat#password#**” to the device.

## 6.7 Voice Surveillance & Two-way calling

**It need connect external optional siren (or car original siren wire).**

6.7.1 Device has 3 modes, the default mode is “tracker” mode (Tracking status).

6.7.2. Send SMS “**#monitor#password#**” to the device, and it will reply “monitor ok!” and switch to “monitor” mode. Then use mobile phone to dial the device number, it will get though and enter voice listening function.

6.7.3. Send SMS “**#tracker#password#**” to the device, it will reply “tracker ok!” and restore to “track” mode.

6.7.4. Send SMS “**#call#password#**” to the device, it will reply “call ok!”. Then use mobile phone to dial the device number, device speaker will ring, press the SOS button to receive the call so that it can realize two-way talking function.



## 6.8 Geo-fence

Set up geo-fence for the unit to restrict its movement within a district. The device will send message to the authorized number automatically when it exceed the district.

6.8.1 When the unit stays immobile in a place, send SMS: **“#stockade#password#semidiameter#”** to unit to set the restricted district.

For example, send SMS: **“#stockade#123456#3#”**, “3” represents 300 meters. In case of breach, it will send SMS **“stockade!+Geo-info”** to the authorized number.

6.8.2 Cancel: Send SMS: **“#nostockade#password#”** to deactivate this function, it will reply **“no stockade ok”**.

## 6.9 Overspeed alarm

6.9.1 Set up: Send SMS: **“#speed#password#speed number in 3 digits#”** to the device (suppose the speed is 80km/h), EG, send SMS **“#speed#123456#080#”**, and it will reply **“speed ok ”**. When the car moves exceeding 80 km/h, the unit will send SMS alert **“speed alarm”** to the authorized number.

6.9.2 Cancel: send SMS **“#nospeed#password#”** to deactivate the overspeed alarm. It will reply **“cancel speed ok”**.

## 6.10 ACC ON alarm

6.10.1 Send SMS "**#ACC#ON#**" to device to start illegal start alarm function, when vehicle ignition on, device will reply "ACC!! +IMEI number+Long&Lat" to the authorized number.

6.10.2 Send SMS "**#ACC#OFF#**" to device to close the function.

## 6.11 SOS alarm

When connect external SOS wire, if press the SOS button 3-4 seconds, device will reply "SOS alarm! +IMEI number+Long&Lat" to authorized number.

## 6.12 Time Zone Setting

Remark: UTC+8 is default time zone.

6.12.1 Send SMS "**#timezone#password#direction#time zone value in hours#time zone in munites#**". If set OK, it will reply "time zone ok".

For example, if in UTC-6, send SMS "**#timezone#123456#W#6#00#**". If in UTC+5.30, send SMS "**#timezone#123456#E#5#30#**".

## 6.13 Cut oil or circuit

Send SMS "**#stopoil#password#**" to device, it will reply "stop oil ok", cut oil successfully.

Send SMS "**#stopelec#password#**" to device, it will reply "stop electricity ok", cut circuit successfully.

## 6.14 Recover oil or circuit

Send SMS "**#supplyoil#password#**" to device, it will reply "supply oil ok", recover oil successfully.

Send SMS “**#supplyelec#password#**” to device, it will reply “supply electricity ok”, recover circuit successfully.

### **6.15 Power failure alarm**

If device was removed from car battery, device will end SMS “cut power alert! +IMEI number+Long&Lat” to the authorized number.

### **6.16 Check device setting parameters**

Send SMS “**TCP**” to device, device will reply SMS “ IP+port+APN+A or V (A: GPS valid,V: GPS invalid).

116.205.4.114:8169:cmnet:A

### **6.17 GPRS setting**

User must send SMS via cell phone to set IP, port and APN before starting GPRS.

#### **6.17.1 Setting APN**

6.17.1.1 APN standards for Access Point Name and differs from country to country. For more information about the local APN, inquiry from your local GPRS network operator.

6.17.1.2 Send SMS “**#apn#password#APN content#APN user name#APN password#**” via a cell phone and if succeeded, the tracker will return the message “set APN OK”.

E.g. send SMS command “**#apn#123456#cmnet#**”.

Notes: CMNET is the APN content of China Mobile (it has no APN user name and password).

#### **6.17.2 IP and Port setting**

Send SMS “**#IP#password#ip address#port number#**”. If succeeded, “set ip address and port ok” will be returned by SMS.

E.g, Send SMS command “**#IP# password #116.205.4.114#8169#**” to the device (116.205.4.114 is IP, 8169 is port, IP is in capital)

### **6.18 Device restart**

Send SMS “**#reboot#123456#**”, device will reply “system will reboot...”.

### **6.19 Web platform GPS tracking software**

Web based platform [www.secumore1818.com](http://www.secumore1818.com), Use IMEI login, default password 123456.

Web platform features as below:

- ◆ Real time tracking
- ◆ History trace replay
- ◆ Platform disable oil or recover oil
- ◆ Multiple user fleet management
- ◆ Detect vehicle alarms and status
- ◆ Support Andriod & IOS APP tracking

## 7 Faults & Solution

<b>Faults</b>	<b>Solution</b>
yellow light flashing	Its failed to read SIM card, need re-install SIM card; after inserting SIM card, then turn on power
blue light flashing	GPS not located, check if working outside not in room; install place has no metal cover
Three light turn off	Lights will enter sleep after stable lighting on 5 minutes and not effect GPS working, when calling device again will wake up lights
Can't track online	Send SMS "TCP" check IP port is correct or not, GPS located show "A" , V means GPS not located.
Device has no reply	Check if already existing admin number; SIM card has balance

## Guarantee Card

User Name		Phone	
Address			
Model No		IMEI No	
Purchase Date		Invoice No	
Seller Name			
Address			
Seller Contact			
<p>1. Within warranty period, if any damage caused by the product's own quality, user can bring the purchasing invoice and warranty card to supplier to arrange repair.</p> <p>2. Those machines that has refitted or added other functions by user own will not be accepted to repair.</p> <p>3. Attempt to disassemble the product can damage it and void your warranty.</p> <p>4. This card and the purchasing invoice are both considered as a receipt for repair, please reserve it carefully.</p>			